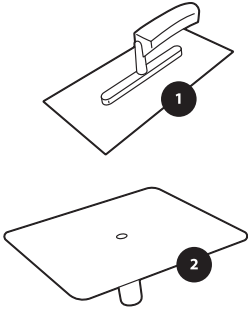




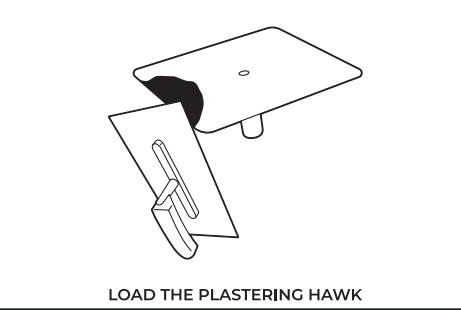
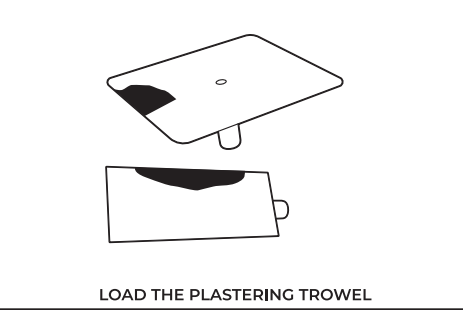
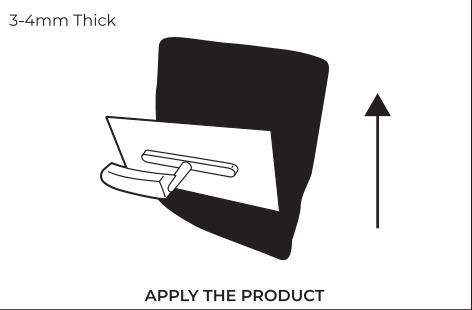

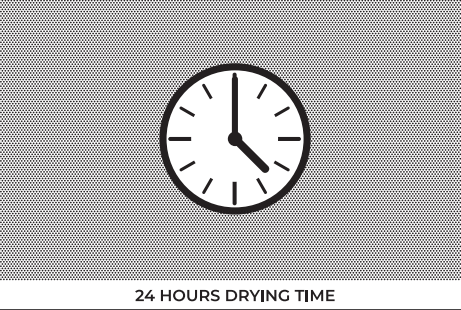
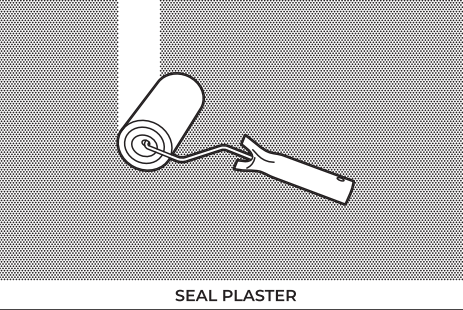


## GLAMOUR COAT DECORATIVE PLASTER APPLICATION GUIDE

REQUIRED TOOLS	STEP 1 PREPARATION	STEP 2 THE FIRST SCOOP	STEP 3 LOADING TROWEL
 <p>1: Stainless Steel Plastering Trowel 2: Plastering Hawk</p> <p>Using a Stainless Steel Plastering Trowel would ensure no rust is transferred from trowel to design area.</p>	<div style="display: flex; flex-wrap: wrap;"> <div style="width: 50%; text-align: center;">  <p>REMOVE LOOSE PAINT</p> </div> <div style="width: 50%; text-align: center;">  <p>CLEAN SURFACES</p> </div> <div style="width: 50%; text-align: center;">  <p>APPLY UNDERCOAT</p> </div> <div style="width: 50%; text-align: center;">  <p>24 HOURS DRYING TIME</p> </div> </div> <ul style="list-style-type: none"> <li>Remove loose / flaking paint</li> <li>Clean surface</li> <li>Apply one coat of DaVinci 2 in 1 Crack Filler &amp; Base Coat to fill cracks &amp; prime the surface.</li> <li>For best results allow 24 hours drying time for DaVinci 2 in 1 Crack Filler &amp; Base Coat.</li> </ul>	 <p>LOAD THE PLASTERING HAWK</p> <p>Scoop a palm size amount of the ready to use DaVinci Glamour Coat Decorative Plaster onto the edge of your plastering hawk.</p>	 <p>LOAD THE PLASTERING TROWEL</p> <p>Scoop up roughly half of that DaVinci Glamour Coat Decorative Plaster from the plastering hawk onto your stainless steel plastering trowel.</p>
STEP 4 APPLICATION	STEP 5 CLEANING	STEP 6 DRYING TIME	STEP 7 SEALING
<p>3-4mm Thick</p>  <p>APPLY THE PRODUCT</p> <p>Once you've loaded your Stainless Steel Plastering Trowel, Apply the product onto the desired surface swiping from bottom to top. Aim to keep the application as thin as 3-4mm for the best coverage results.</p> <p><b>Tip:</b> Swiping from side to side would assist in removing any creases that may form whilst applying the product in a vertical motion.</p>	 <p>WAIT 7 DAYS BEFORE CLEANING</p> <p>Do not attempt to clean DaVinci Glamour Coat Decorative Plaster within the first 7 days of application.</p>	 <p>24 HOURS DRYING TIME</p> <p>Once applied a 24hr drying time is required.</p>	 <p>SEAL PLASTER</p> <p>Apply one to two coats of DaVinci Decorative Plaster Sealant for a high gloss finish and further protection.</p> <p>A 24hr drying time is necessary between coats.</p> <p>DaVinci Decorative Plaster Sealant must be applied 24 hours after DaVinci Glamour Coat Decorative Plaster.</p>